

LT Screwdriver Optional Clutch Springs

Model	Clutch Springs Provided		Torque Range Hard Joint		Clutch Spring Part Number
	Standard	Option	Nm	in-lb	
US-LT10/10B	Black		0.20 - 0.59	1.7 - 5.2	976-379-0
US-LT20B-10	Black	Red Yellow	0.34 - 1.08 0.20 - 0.67 0.15 - 0.34	3.0 - 9.5 1.7 - 6.1 1.3 - 3.0	976-432-0 976-431-0 976-430-0
US-LT20B-18	Red	Yellow	0.24 - 0.67 0.15 - 0.34	2.2 - 6.1 1.3 - 3.0	976-431-0 976-430-0
US-LT20B-26	Yellow		0.15 - 0.34	1.3 - 3.0	976-430-0
US-LT31PB-05	Red	Pink	2.35 - 5.00 0.98 - 2.74	20.9 - 44.0 8.7 - 24.3	976-493-0 976-471-0
US-LT30 Series 1100 rpm	Blue	Red Pink Black	0.98 - 2.10 0.67 - 1.76 0.39 - 0.98 1.22 - 2.74	8.7 - 18.5 6.1 - 15.6 3.5 - 8.7 10.8 - 24.3	976-472-0 976-493-0 976-471-0 976-504-0
US-LT30 Series 1700 rpm	Red	Pink	0.67 - 1.47 0.39 - 0.98	6.1 - 13.0 3.5 - 8.7	976-493-0 976-471-0
US-LT30 Series 2300 rpm	Pink		0.39 - 0.98	3.5 - 8.7	976-471-0
US-LT40-03C	Red		4.90 - 9.80	43.4 - 86.8	976-516-0
US-LT40 Series 800 rpm	Black	Red Yellow	1.57 - 3.92 0.98 - 2.17 0.98 - 1.70	13.9 - 34.7 8.7 - 19.1 8.7 - 14.8	976-515-0 976-516-0 976-517-0
US-LT40 Series 1500 rpm	Red	Yellow	0.98 - 2.17 0.98 - 1.67	8.7 - 19.1 8.7 - 14.8	976-516-0 976-517-0
US-LT40 Series 2100 rpm	Yellow		0.98 - 1.67	8.7 - 14.8	976-517-0
US-LT50 Series 500 rpm	Black	Red Yellow	4.90 - 10.3 2.90 - 5.40 1.40 - 2.50	43.4 - 91.1 26.1 - 47.7 13.0 - 22.6	976-620-0 976-614-0 976-588-0
US-LT50 Series 800 rpm	Red	Yellow	2.70 - 5.40 1.40 - 2.50	24.3 - 47.7 13.0 - 22.6	976-614-0 976-588-0
US-LT50 Series 1700 rpm	Yellow		1.40 - 2.60	13.0 - 23.0	976-588-0

EXTERNAL TORQUE ADJUSTMENT (Air Shut-off)

Set the hand driver through the slot into the key hole on the Adjusting Gear and turn clockwise to increase torque and counter clockwise to decrease.

